

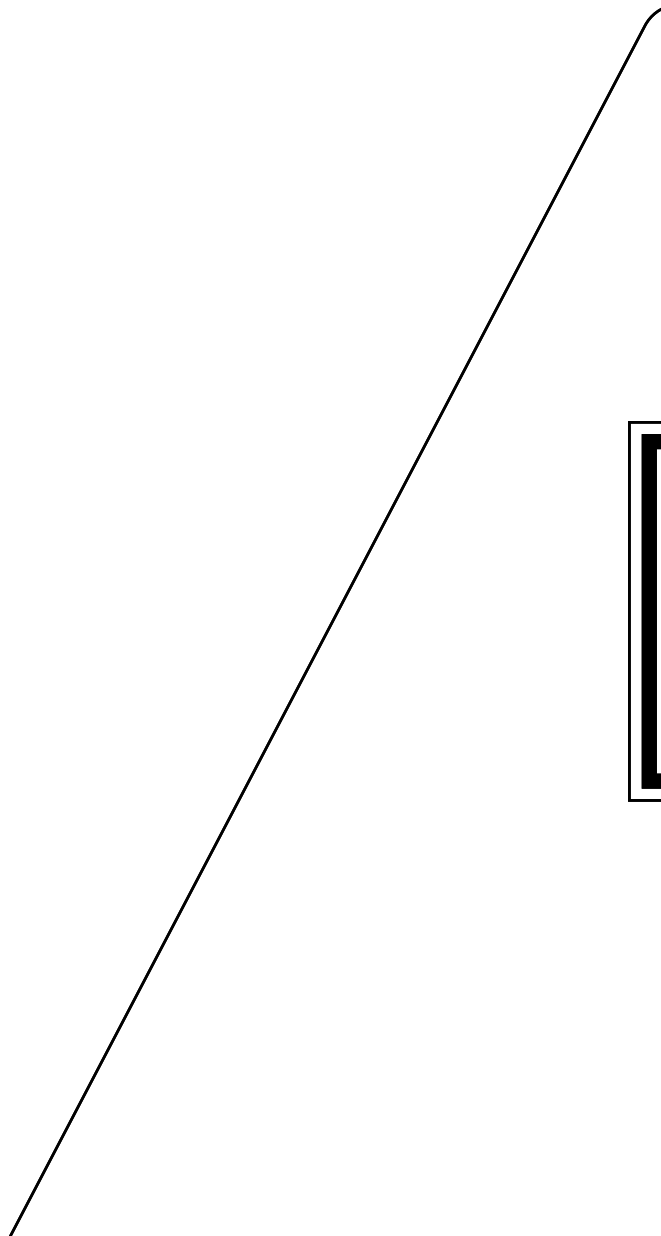
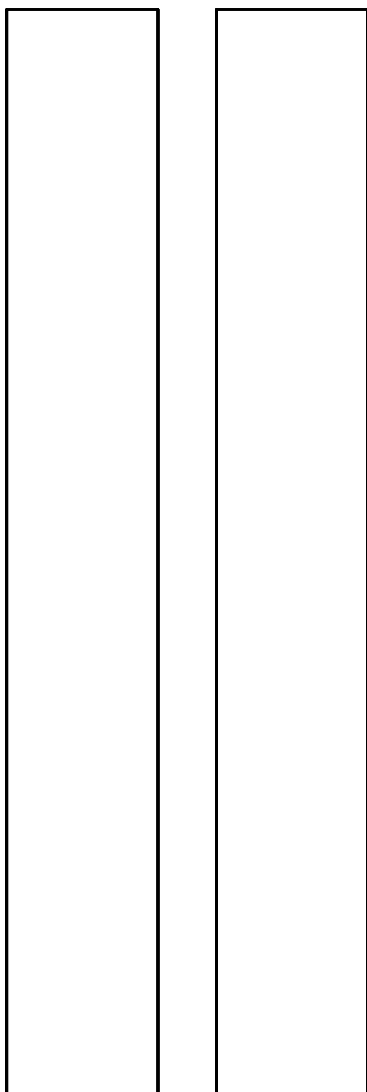


RESTRAP

TECHNICAL BIKEPACKING GEAR



- Print this document on A4 paper (21x29.7cm) making sure that it is at 100% scale.
- Measure both sides of the crossed needles to verify the scale is accurate.
- Assemble the prints according to the numbered guide on each sheet, ensuring the registration marks lay on top of each other.
- Tape the sheets together, then cut along the bag's outline for a physical representation of our bag's shape and size.

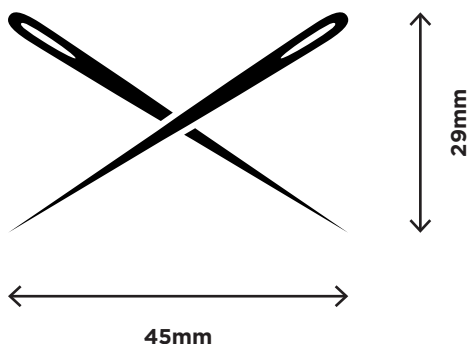

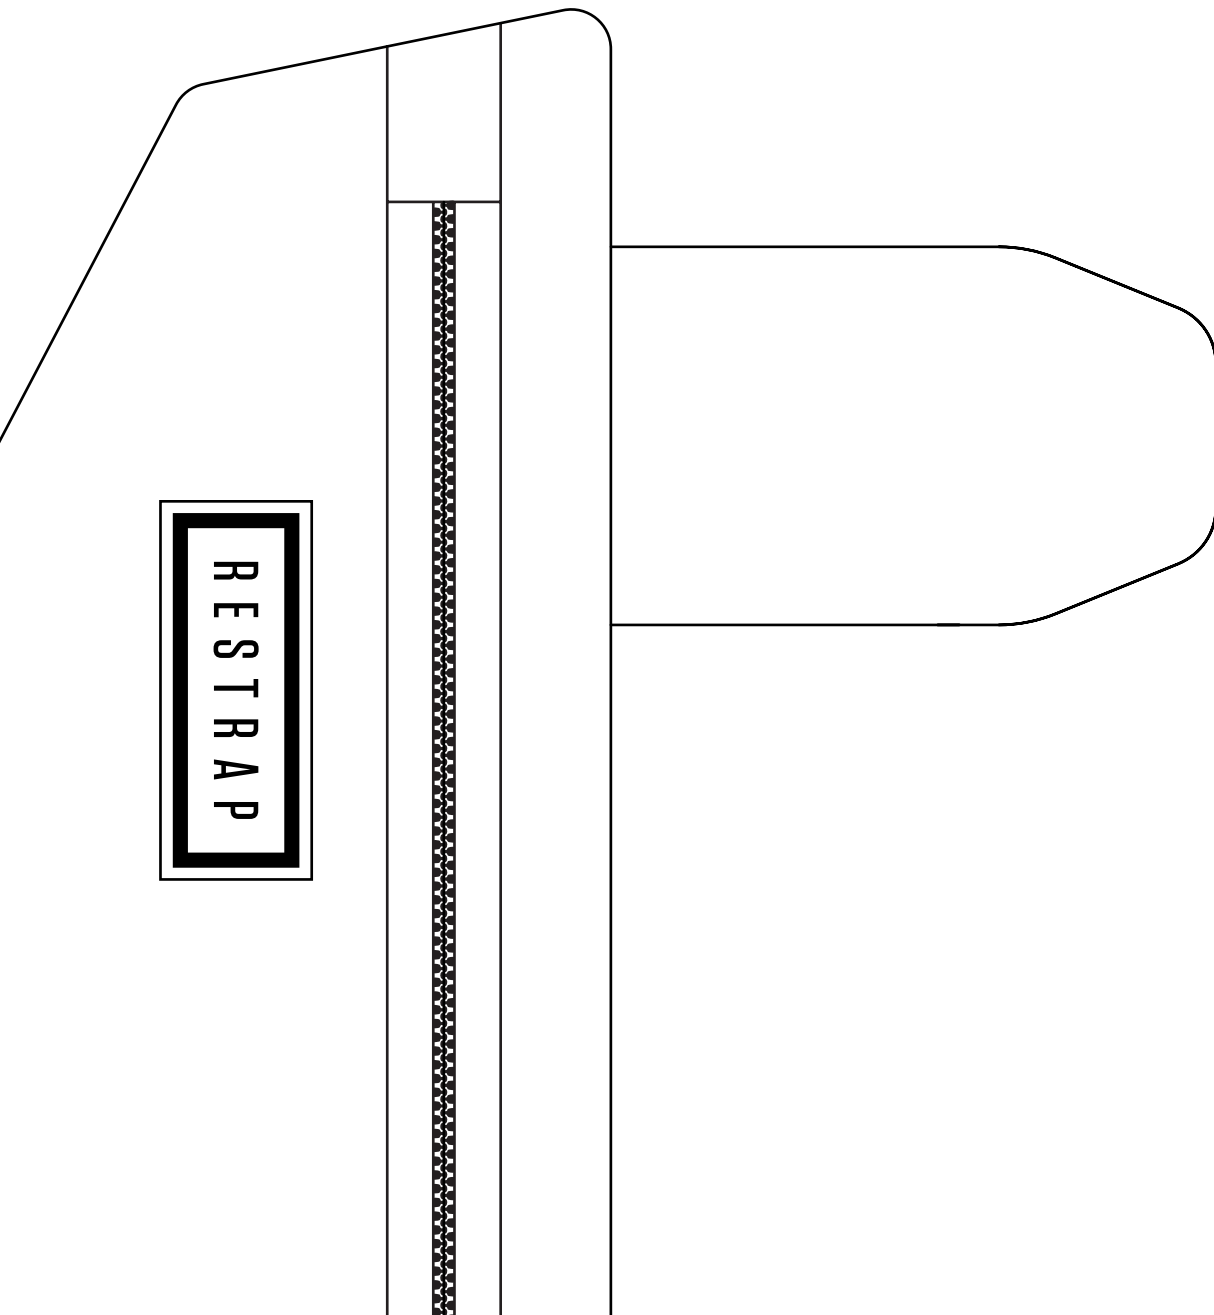



NUMBER GUIDE

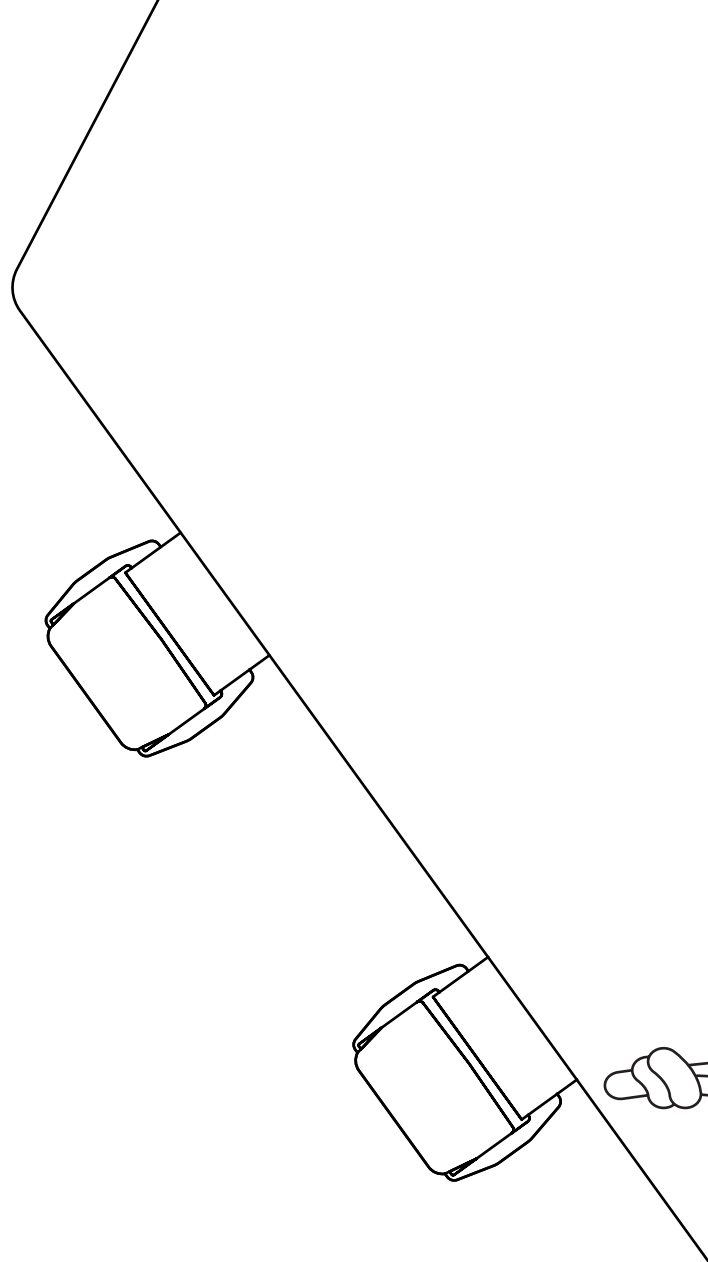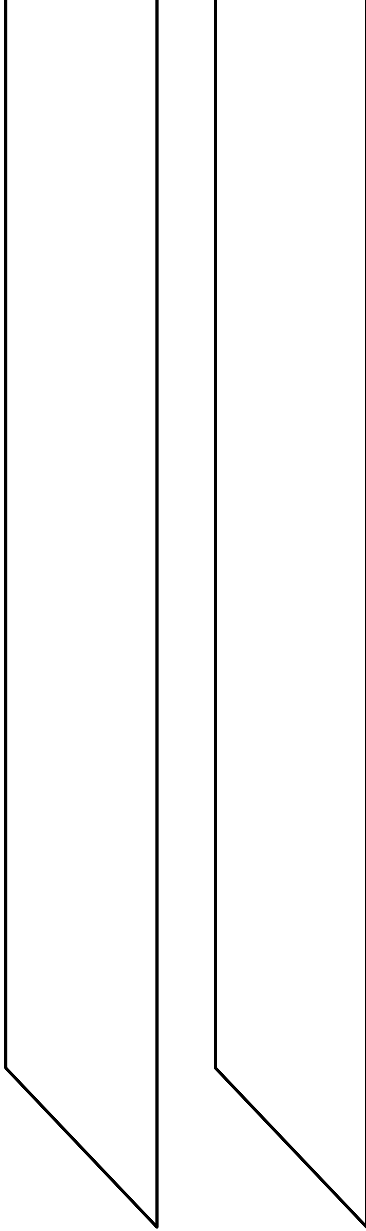

RESTRAP
TECHNICAL BACKPACKING GEAR

- Fold this attachment on 2.5 cm paper (24x36 cm) and use glue to fix it to the fabric.
- Measure both sides of the attachment to make sure they are identical.
- Sew the attachment to the fabric, making sure the attachment is centered on the fabric.
- Turn the attachment together with the fabric and press it with an iron.

RESTRAP FRAME BAG - SMALL

